
#### **Swing Spout Installation Instructions**

#### Step 1.


Apply O-ring lube to the O-rings on the swing spout. Make sure the white snap ring is in place before mounting the swing spout. Mount the swing spout and tighten the swing spout nut onto the faucet spout outlet.

#### Step 2.

Turn on water supply and check for leaks.

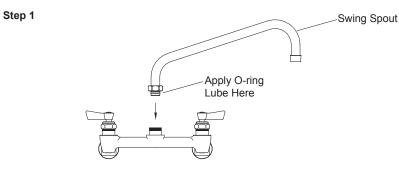

#### Step 2

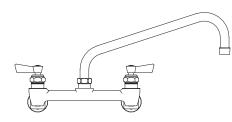




MANUFACTURING COMPANY PO BOX 60, TULARE, CA 93275 (800)421-6162, FAX: (800)832-8238 www.fisher-mfg.com



## Stainless Steel 8" Backsplash/Adjustable Wall Mount Faucets Product Installation Guide

 Since 1936, Fisher Manufacturing Company has manufactured heavy-duty, high quality plumbing products and hardware specialties for the food service industry. For three generations, the Fisher family has adhered to a strict dedication of overall value. When you install Fisher products... you install the best. Our hardware is manufactured with the standardization of internal mechanisms. Every piece of equipment we make is rigorously tested in both our modern in-house testing center and in actual field situations under extreme conditions. Every detail is thoroughly checked. Before we make our products available to you, they pass each and every test. You get proven performance. Guaranteed.



Fisher Manufacturing Company warrants its products and parts thereof (except as noted below) against defects in materials or workmanship for a period of one year after the date of original purchase. During this period Fisher Manufacturing Company will replace a defective product or part without charge to you, provided that the entire product is delivered to Fisher Manufacturing Company. All transportation and insurance charges for shipping the product to and from Fisher Manufacturing Company must be borne by you. Charges for transportation and insurance may, at the option of Fisher Manufacturing Company, be refunded depending upon our investigation of the warranty claim. This warranty does not cover external finish (except at date of original purchase) or labor costs not specifically authorized by Fisher Manufacturing Company.

A full and complete copy of our One Year limited warranty is available upon request.



#### Lever Handles

46280 - 8" Backsplash/Wall Faucet 6" Swing Spout 46299 - 8" Backsplash/Wall Faucet 8" Swing Spout 46302 - 8" Backsplash/Wall Faucet 10" Swing Spout 46310 - 8" Backsplash/Wall Faucet 12" Swing Spout 46329 - 8" Backsplash/Wall Faucet 14" Swing Spout 46337 - 8" Backsplash/Wall Faucet 16" Swing Spout

#### Wrist Handles

- 57061 8" Backsplash/Wall Faucet 6" Swing Spout
- 57088 8" Backsplash/Wall Faucet 8" Swing Spout
- 57096 8" Backsplash/Wall Faucet 10" Swing Spout
- 57118 8" Backsplash/Wall Faucet 12" Swing Spout
- 57126 8" Backsplash/Wall Faucet 14" Swing Spout
- 57134 8" Backsplash/Wall Faucet 16" Swing Spout





ANSI/A112.18.1M, ANSI/NSF 61.9

FISHER MANUFACTURING COMPANY, TOLL FREE: 800-421-6162, FAX:800-832-8238

www.noleadfaucet.com

# BE SURE TO CHECK WITH YOUR LOCAL DEPARTMENT HAVING JURISDICTION REGARDING BACKFLOW PREVENTION.

#### Installation Notes:

- Be sure water supply is shut-off before beginning.
- Use pipe thread sealant on all threaded joints such as PST or Teflon tape.
- Check the packaging for missing items BEFORE beginning installation. If items are missing, contact your supplier.

#### Items needed for Installation:

- 1 Medium Sized Crescent Wrenches
- 1 Plumbers Tape or Pipe Thread Sealant


### 8" Backsplash Installation Instructions

#### Step 1.

After unpacking items and checking for missing components, insert the gasket into the groove on the concentric. Making sure gasket is in place, loosely mount the concentric and flange onto the control valve body.

## Step 2.

Mount control valve body to the backsplash by inserting the concentrics through the backsplash and attaching slip joints. Tighten concentrics and attach elbows and supply lines (not included) as required. Be sure to use pipe thread sealant on all threads.

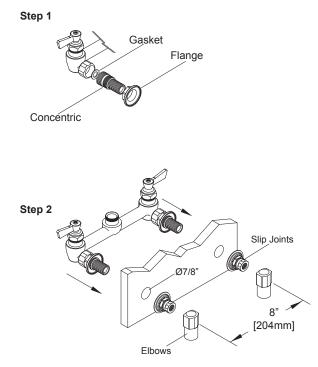

## 8" Adjustable Wall Mount Installation Instructions

#### Step 1.

After unpacking items and checking for missing components, insert and center the gasket into the female swivel inlets of the 8" control valve body. Loosely mount the eccentrics and flange onto the control valve body.

## Step 2.

Mount control valve body to either a wall with a male supply nipples, or backsplash with nipples (not included). Be sure to use pipe thread sealant on the supply nipple threads. Adjust the eccentrics as needed in order to mount the control valve level. Once level, tighten the eccentrics

