5071 10" CONTROL SWING

SPOUT



# FATB-PFDJ-8BSEELL Product Installation Guide

Since 1936, Fisher Manufacturing Company has manufactured heavy-duty, high quality plumbing products and hardware specialties for the food service industry. For three generations, the Fisher family has adhered to a strict dedication of and overall value. When you install Fisher products... you install the best. Our hardware is manufactured with the standardization of internal mechanisms. All chrome plating is triple plated copper, nickel and chrome for durability. Every piece of equipment we make is rigorously tested in both our modern in-house testing center and in actual field situations under extreme conditions. Every detail is thoroughly checked. Before we make our products available to you, they pass each and every test. You get proven performance. Guaranteed.



#### Limited One Year Warranty

Fisher Manufacturing Company warrants its products and parts thereof (except as noted below) against defects in materials or workmanship for a period of one year after the date of original purchase. During this period Fisher Manufacturing Company will replace a defective product or part without charge to you, provided that the entire product is delivered to Fisher Manufacturing Company. All transportation and insurance charges for shipping the product to and from Fisher Manufacturing Company must be borne by you. Charges for transportation and insurance may, at the option of Fisher Manufacturing Company, be refunded depending upon our investigation of the warranty claim. This warranty does not cover external finish (except at date of original purchase) or labor costs not specifically authorized by Fisher Manufacturing Company.

A full and complete copy of our One Year limited warranty is available upon request.

### WARNING:

*Proposition 65 requires that we provide you with the following notice:* "This product Contains A Chemical Known To The State Of California To Cause Birth Defects Or Other Reproductive Harm."

## #2283 - 3/4 FAUCET 8BSELH 10CS10DJ

2000-2301 LEVER HANDLE 2000-3002 5000-0012 BIBB CAP RH CHECK STEM REPAIR KIT OR 73657 5000-0013 DUCK GASKET LH CHECK STEM REPAIR KIT 2000-5000 WASHER 5000-0003 2000-3406 DOUBLE JOINT LH CHECK STEM SPOUT 10" OR 2000-3407 1 1 RH CHECK STEM WWW 2000-6000 SPRING 73453 RETAINER ASSEMBLY 73550 SEAT WASHER 73521 LUBE 2992 PST 5000-2103 3/4" ELBOW 73570 RH STEM ADAPTER OR 73560 I H STEM ADAPTER

> MANFACTURING COMPANY PO BOX 60, TULARE, CA 93275 (800)421-6162, FAX: (800)832-8238 www.fisher-mfg.com

KEEP THIS MANUAL FOR FUTURE REFERENCE



(pmi

ANSI/A112.18.1M, ANSI/NSF 61.9

FISHER MANUFACTURING COMPANY - TOLL FREE: 800-421-6162 FAX: 800-832-8238

5400-CV CONTROL VALVE

Î

 $\sim$ 

2000-7500

SCREW

2000-8000

RED BUTTON

AND

2000-8001

BLUE BUTTON

## Installation Instructions for Backsplash Faucets

BE SURE TO CHECK WITH YOUR LOCAL DEPARTMENT HAVING JURISDICTION REGARDING BACKFLOW PREVENTION

## Installation Notes:

- · Be sure to shut off water supply before beginning.
- Use pipe thread sealant such as PST on all threaded joints.
- Check the packaging for missing items BEFORE beginning installation. If items are missing, contact your supplier.


## **Tools Required for Installation**

- Medium Sized Crescent Wrench
- Pipe Thread Sealant




### Package Contents

The box should contain the following:

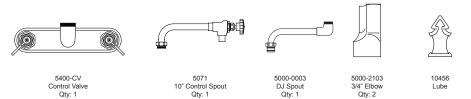



#### Installation Instructions

- Mount control valve body to the backsplash by inserting the nipples through the backsplash and attaching washers and locknuts. Tighten the locknuts until the control valve is secure. Be sure to use pipe thread sealant on the nipple threads. Attach elbows and make sure that there are no leaks from back of sink.
- Apply lube to the o-rings on the double jointed spout. Mount the double joint spout and tighten the nut onto the faucet spout outlet.
- Apply lube to the o-rings on the control spout. Mount the control spout on the double jointed spout and tighten the control spout nut onto the double jointed spout outlet.
- 4. Turn on water supply and check for leaks.

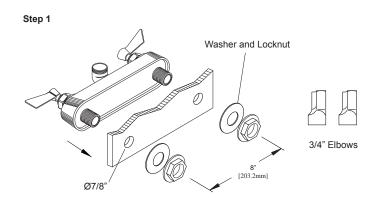

Installation Instructions Continued

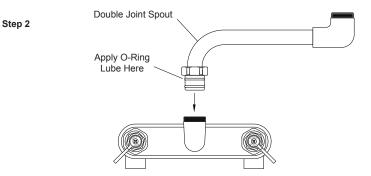

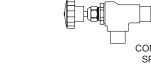





Step 3

